



AMERICAN SPECIALTIES, INC.


441 Saw Mill River Road, Yonkers, NY 10701 (914) 476-9000
www.americanspecialties.com

MODEL No: 19-42

ISSUED: 5-05

REVISED: 3-06

GLOBE ADAPTER

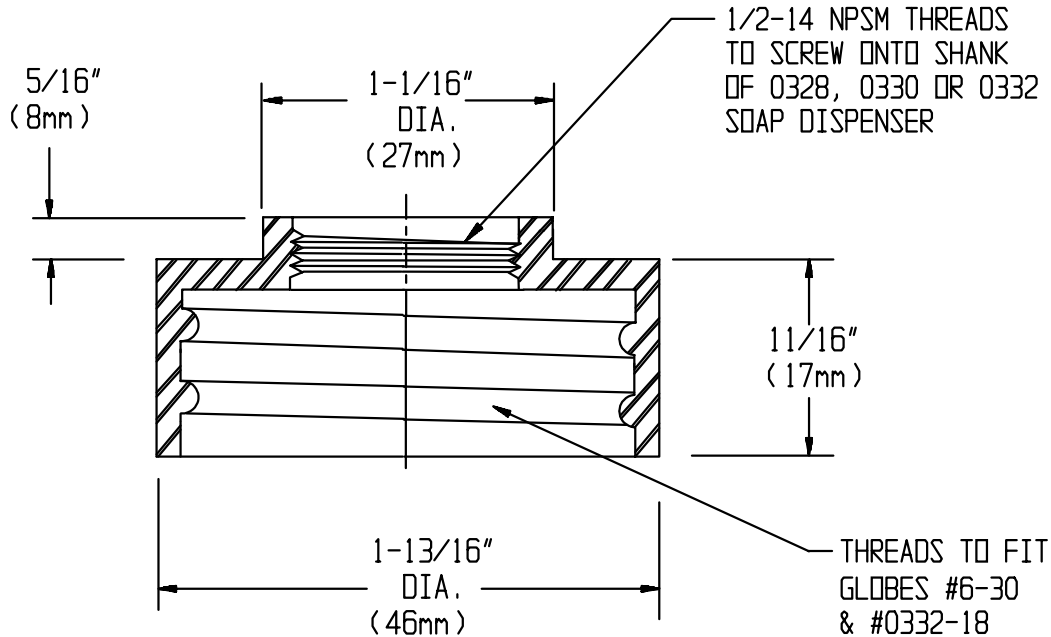

SECTIONAL VIEW

SPECIFICATION

Globe adapter shall be white Celcon with two sets of internal threads to fit the shank of soap dispenser Model N^o's 0328, 0330 and 0332 and globe N^o's 6-30 and 0332-18. The 19-42 shall be compatible with all soaps, lotions or detergents suitable for the dispenser application, including those containing antimicrobial agents such as PCMX or Triclosan.

Globe Adapter shall be Model N^o 19-42 of American Specialties, Inc., 441 Saw Mill River Road, Yonkers, New York 10701-4913

INSTALLATION

Apply globe adapter N^o 19-42 to top of bottle threads and hand tighten snugly. This provides threads on the globe assembly compatible with the shank of the dispenser mounted in the lavatory. The assembly is installed on the shank by hand and positioned so that the dip tube of the dispenser is approximately 1/4" (6.4mm) above the inside bottom of the globe. The Lock Nut (already on the shank, not supplied with 19-42) is then tightened snugly against the top of the 19-42 adapter to prevent rotation.

OPERATION

Globe adapter allows the replacement of lower capacity bottles with the 34 oz (1 liter) bottle on the same lavatory mount shank. Adapter threads hold bottle tight to shank to contain soap without leaking, prevent airborne contamination of the soap reservoir and maintain low evaporation rate to keep supply fresh for duration of delivery cycle. Bottle should be filled from top of counter (through shank top opening with pump and escutcheon removed to avoid disturbing bottle with adapter and lock nuts under counter). Threads are not designed to be a liquid tight seal and the same liquid level below the shank should be observed as with non-adapter bottle installations to ensure no overflow and a seep free hygienic installation.